

Varlogic NR6, NR12

Power factor controller

User manual

DB121630

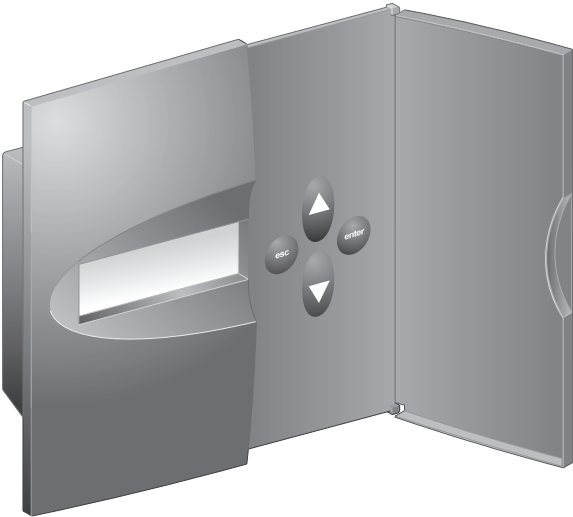


Table of Contents

1. General3
 1.1 Safety3
 1.2 Description3
2. Installation5
3. Display6
4. Start-up Procedure6
5. Menu Operations7
 5.1 General7
 5.2 Main Menu9
 5.3 Bank Pre-Configuration11
 5.4 Commissioning13
 5.5 Auto Setup of Parameters14
 5.6 Manual Setup of Parameters15
 5.7 Measurement Menu17
 5.8 Parameter Update18
 5.9 Alarms Menu19
 5.10 Maintenance Menu21
6. Miscellaneous22
 6.1 Stepping Programs22
 6.2 Manual calculation of response value26
 6.3 High Voltage use of NR6/NR1227
7. Glossary29
8. Technical specifications32


1. General

1.1 Safety

The following precautions must be taken into account when installing and operating the controller:

- The installation of the controller must be performed by a qualified electrician.
 - Do not touch the connectors when the controller is energized, make sure that the operating voltage is disconnected before touching any parts located on the rear side of the controller.
 - Do not open a live current circuit, this may cause dangerous overvoltages. Always short circuit the current transformer (CT) before replacing or removing the controller installed in a bank.
 - Do not open the controller casing, there are no user serviceable parts inside.
- For better understanding of the terminology used, please refer to the Glossary (chapter 7) at the end of this manual.

1.2 Description

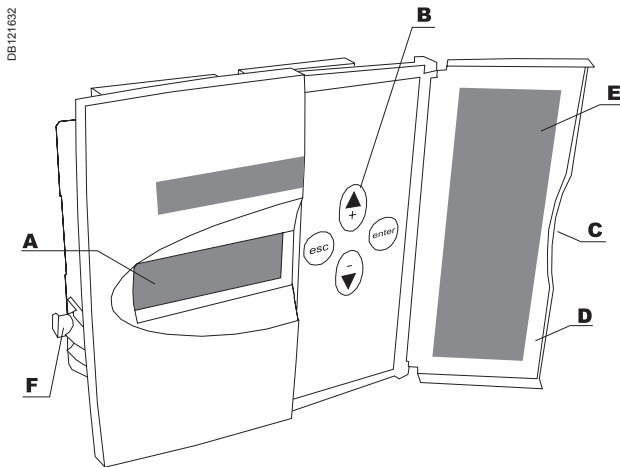

Front view:


Legend

| | |
|---|--|
| A | Display |
| B | Keys |
| C | Opening of door |
| D | Door |
| E | Alarm information |
| F | Mounting bracket for panel mounting installation |

Power Factor Controller NR6 / NR12

User manual

DB121631

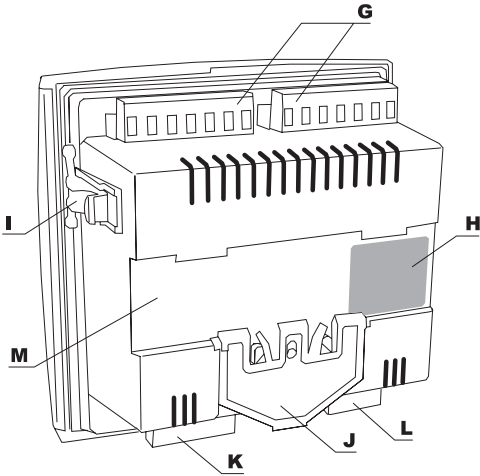


Rear view:

Legend

| | |
|----------|--|
| G | Step output connectors |
| H | Specification label |
| I | Mounting bracket for panel mounting installation |
| J | Fixing spring for DIN-rail mounting |
| K | Current/voltage connection inputs |
| L | Fan and alarm outputs |
| M | DIN-rail mounting installation area |

DB121633

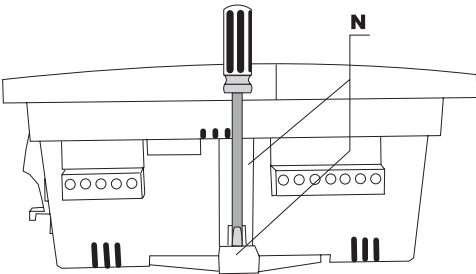

Side view:

Legend

| | |
|----------|-------------------|
| N | Screwdriver guide |
|----------|-------------------|

See Chapter 8 for technical specifications.

2. Installation

The controller is designed for either panel (cut-out 138 x 138 mm) or DIN-rail installation. It is locked to the rail by a screwdriver-operated fixing spring and to a panel by a side fitting spring.

There are two ways of connecting the controller to the network:

- Voltage LN (Line – Neutral) ⇒ (CT on the same line phase)
- Voltage LL (Line – Line) ⇒ (CT on the third phase)

Incorrect connections can be automatically corrected by the controller when *Auto Setup* is selected from the main menu.

Caution: For use in HV network, look first at chapter 6.3.

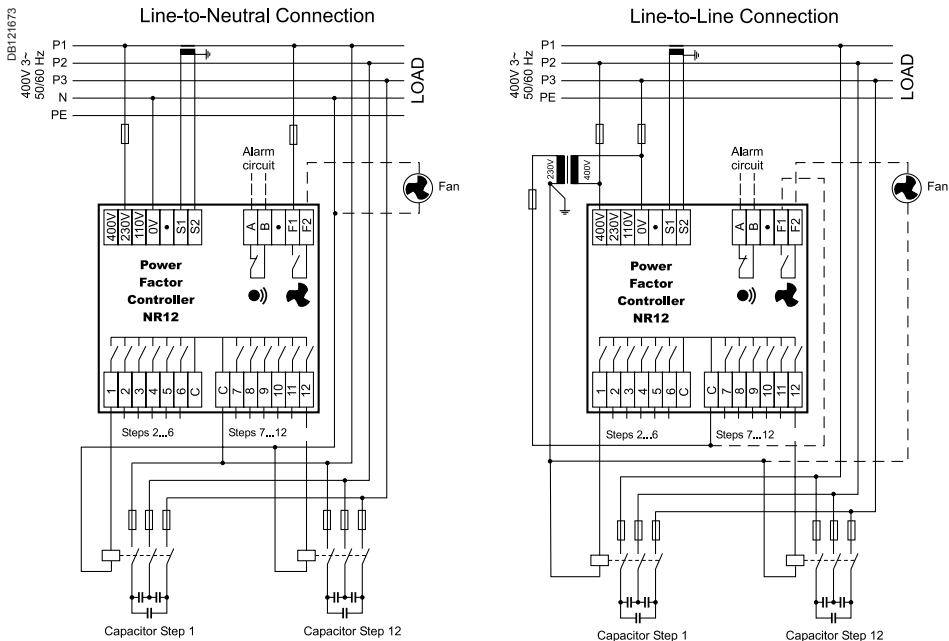


Figure 1: Controller connections.

3. Display

The controller is equipped with a backlighted LCD-display.

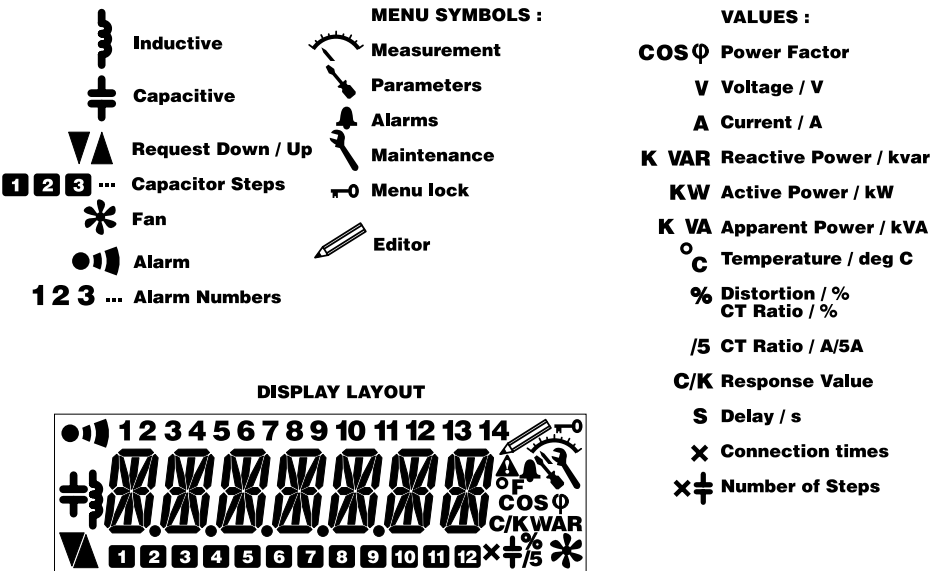


Figure 2: Display layout and symbols.

4. Start-up Procedure

Before connecting power, check the wiring of all controller terminals. Check carefully for correct operating voltage. Selection of wrong voltage input can permanently damage the controller.

After the first power switch-on, the controller will automatically ask for the language setting of the menu.

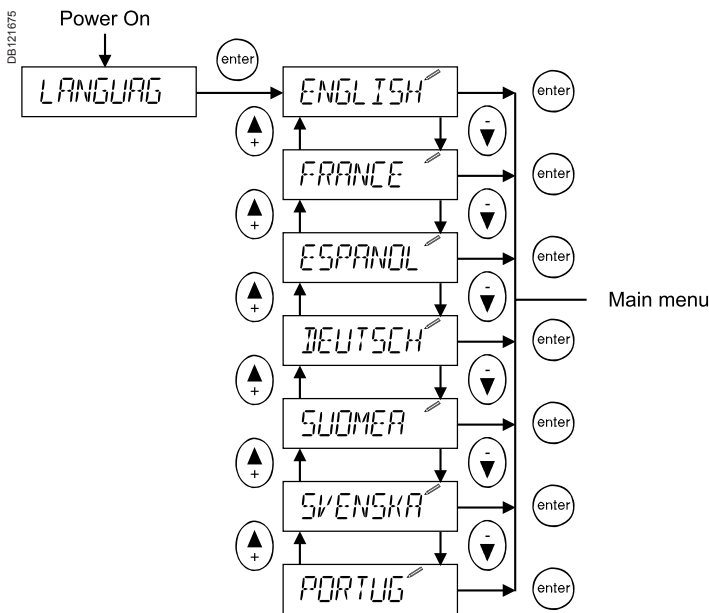


Figure 3: Language setting dialog.

5. Menu Operations

5.1 General

Navigation between different menu levels.

As a precaution against accidental use, the access of certain menus has been protected by a keylock, which is a special sequence of keystrokes enabling the use the particular menu item.

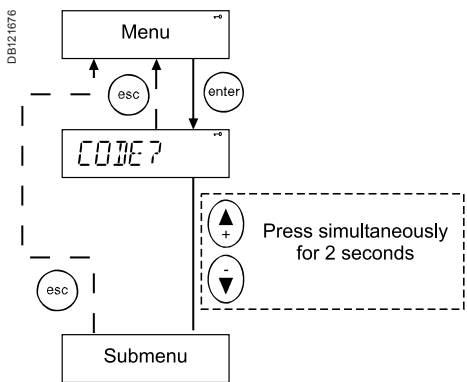


Figure 4: General way of entering the menu with a keylock.

Adjusting a value.

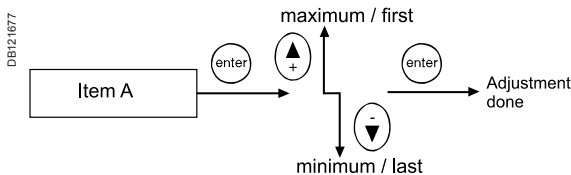


Figure 5: Adjusting a value.

Special case: The wiring editor.

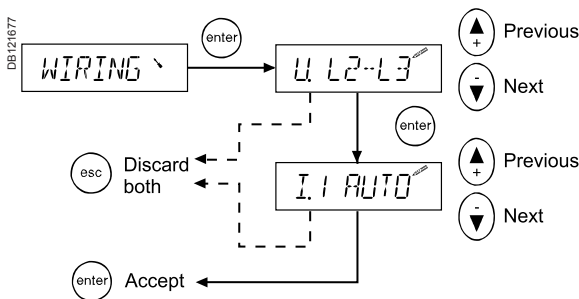


Figure 6: The wiring editor.

5.2 Main Menu

The main menu contains all basic submenus required to set up and operate the controller.

Which menu to choose ?

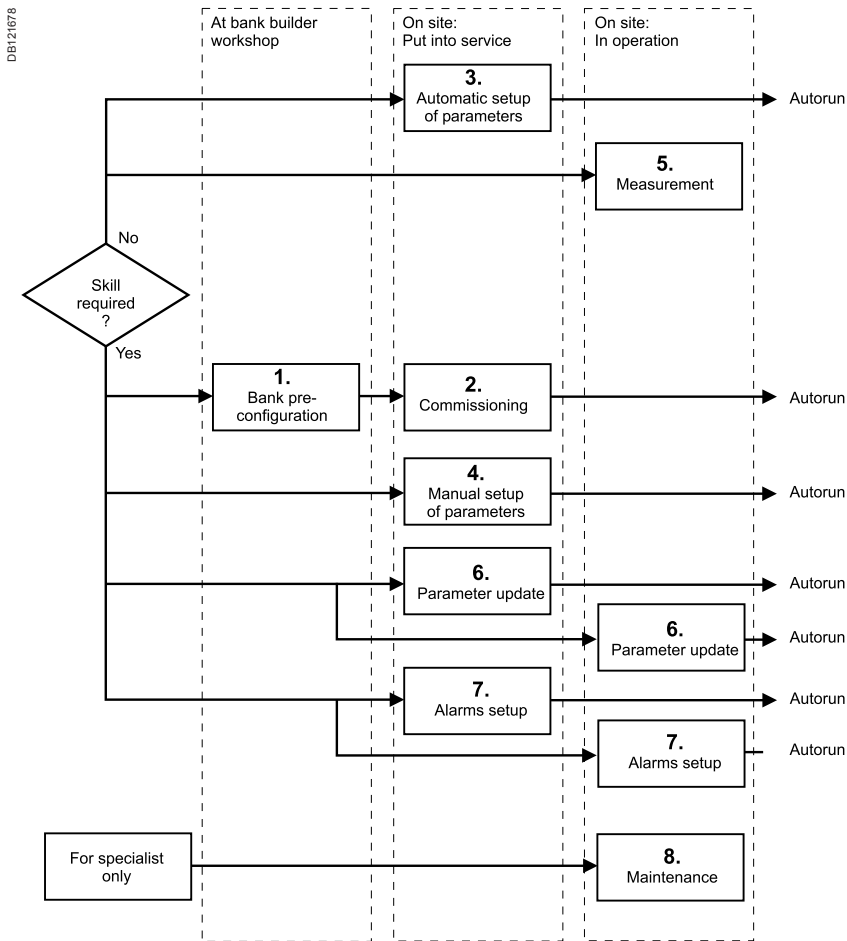


Figure 7: Required skills and menu selection.

If bank preconfiguration is properly done, commissioning does not require any special skill.

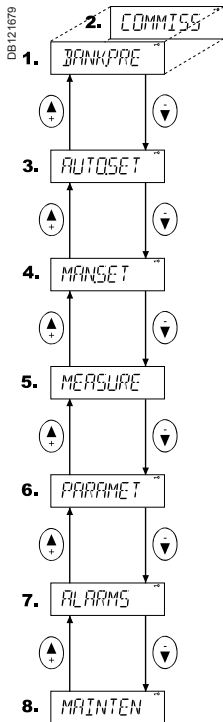


Figure 8:
Main menu.

(1) Bank pre-configuration

When factory settings have not been changed, this menu provides the bank builder the means of pre-configuring the bank at the workshop. After pre-configuration, this menu topic is replaced by

(2) Commissioning,

by which the controller is taken into service.

(3) Automatic setup of parameters

In the event that the controller has not been pre-configured, an inexperienced user can automatically set up all the characteristics of the bank and bring it into service.

(4) Manual setup of parameters

In the event that the controller has not been pre-configured, an experienced user can manually set up all the characteristics of the bank and bring it into service.

(5) Measurement

The measurement menu contains the most common measurements taken from the network and provides some information about the bank. This is a read-only menu.

(6) Parameter update

At any time, an experienced user can access the most common operating parameters from this menu. Unlike the configuration and setup sequences, this is a menu allowing a free and unrestricted entry into all its items and should be used when an occasional parameter access is needed.

(7) Alarm settings

To adjust status and parameters of alarms.


(8) Maintenance

The maintenance menu provides some useful information about the usage of the bank, capacitors and contactors. Some auxiliary settings and action have also been provided. This menu is basically intended for use by the manufacturer's maintenance team.

5.3 Bank Pre-Configuration

This menu item is a forced sequence, meaning that all items must be accessed before the pre-configuration takes place.

NOTE: Do not use of the Bank Pre-Configuration menu for HV network applications.

The sequence can be interrupted by pressing  key.

See Glossary (chapter 7) for parameters definitions.

Power Factor Controller NR6 / NR12
User manual

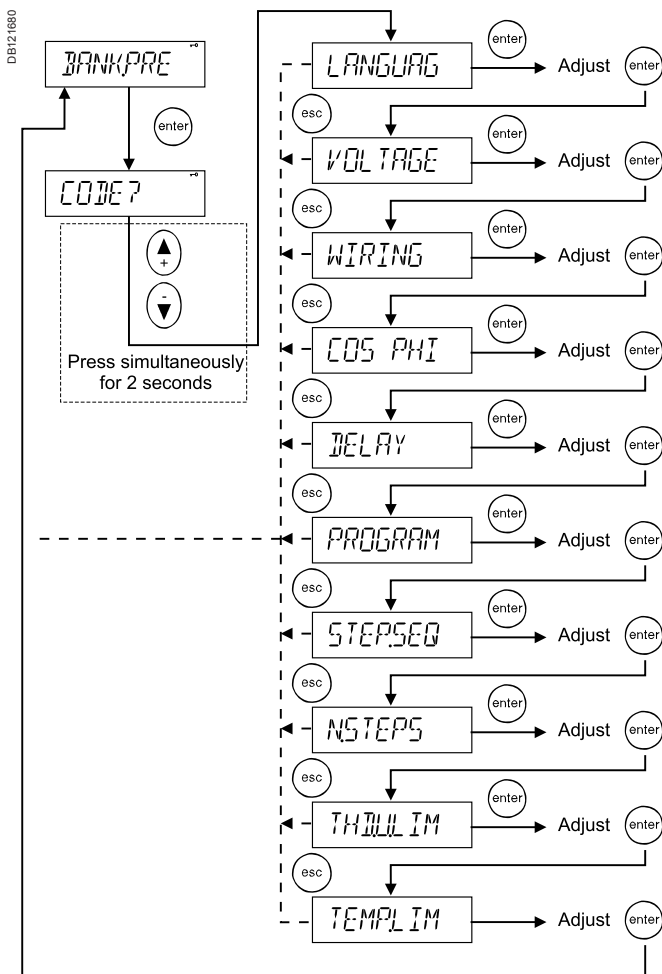


Figure 9: Bank pre-configuration.

5.4 Commissioning

A pre-configured controller is put into service by this menu. The sequence contains an automatic parameter verification to check that the manually entered parameters agree with the network used.

See Glossary (chapter 7) for parameter definitions.

NOTE: Do not use of the Commissioning menu for HV network applications.

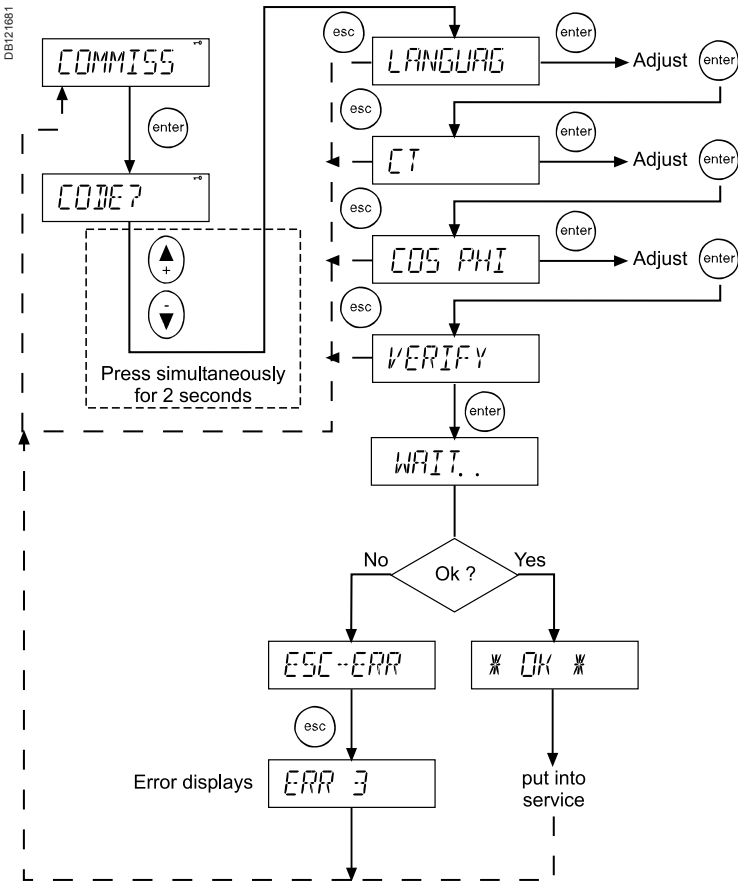


Figure 10: Commissioning.

What to do in case of error?

Error codes can help you to identify a problem and make corrections.

| Code | Meaning | Action to do |
|-------------------|--|--|
| ERR 1 | Unstable network: The controller is unable to operate due to excessive load variations on the network. CT oversized. | <ul style="list-style-type: none"> ● Enter the parameter settings manually using <i>Parameter Update menu</i>. ● Rerun the commissioning sequence. |
| ERR 2 | Step size too small: The effect of the 1 st step cannot be measured. CT oversized, wrong wiring, inoperative steps. | <ul style="list-style-type: none"> ● Check wiring, CT, condition of capacitor steps (1st step). |
| ERR 3 | Sequence not found: Step ratio does not match available step sequences. | <ul style="list-style-type: none"> ● Check the condition and sizes of steps and contactors. |
| ERR 4 | Step size too large: The ratio of measured step compared with the 1 st step is too large. Step sequence cannot be resolved. | <ul style="list-style-type: none"> ● Check the condition and sizes of steps and contactors. |
| ERR 5 | Non-relevant autoseup process with this bank configuration. | <ul style="list-style-type: none"> ● Use manual setup to confirm or correct the information obtained by autoseup. |
| ERR 6 to ERR 8 | Reserved | |
| ERR 9 | Wiring verify error: Controller wiring not correct. | <ul style="list-style-type: none"> ● Check the wiring of voltage and current inputs. ● Check the Wiring setting from Parameter Update menu. |
| ERR 10 | Step count error: The Number of Steps setting is incorrect. | <ul style="list-style-type: none"> ● Check the Number of Steps setting. ● Check the number of steps in the bank and the condition of steps. |
| ERR 11 | Step sequence error: The step size ratios differ from the selected step sequence. | <ul style="list-style-type: none"> ● Check Step Sequence setting ● Check step sizes used in the bank |
| ERR 12 | C/K value error. | <ul style="list-style-type: none"> ● Check the response value used ● Check the size of 1st step in the bank |

5.5 Auto Setup of Parameters

The auto setup sequence is intended for inexperienced users so they can commission the bank with minimal prior knowledge. The user need only input three of the most common parameters and then launch an automatic search for the other parameters.

NOTE: The use of Auto Setup of Parameters menu is forbidden on HV network applications.

In the event of error, see the *Commissioning Menu* (chapter 5.4).

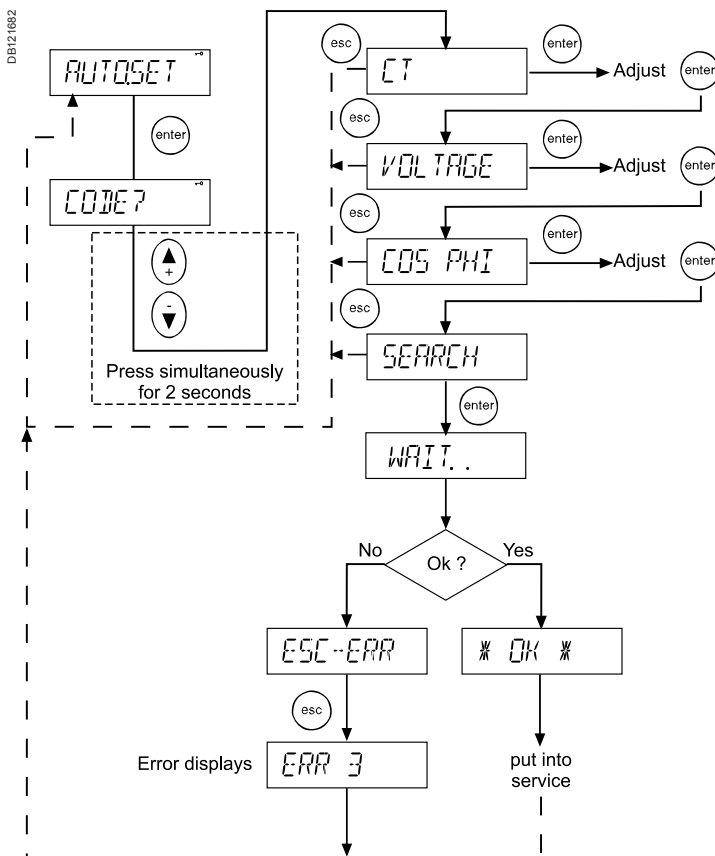


Figure 11: Auto setup of parameters.

5.6 Manual Setup of Parameters

The manual setup sequence is intended for experienced users. There are nine important parameters to input before the controller can be taken into service. This sequence is completed by an automatic verification of the parameters entered earlier in this sequence.

This menu item is a forced sequence, meaning that all items must be accessed before the validation of the setup takes place.

The sequence can be interrupted by pressing key.

See Glossary (chapter 7), for parameter definitions.

In case of error, refer to the *Commissioning Menu*, chapter 5.4.

User manual



Figure 12: Manual setup of parameters.

5.7 Measurement Menu

The measurement menu contains the most common measurements taken from the network.

This is a read-only menu sequence.

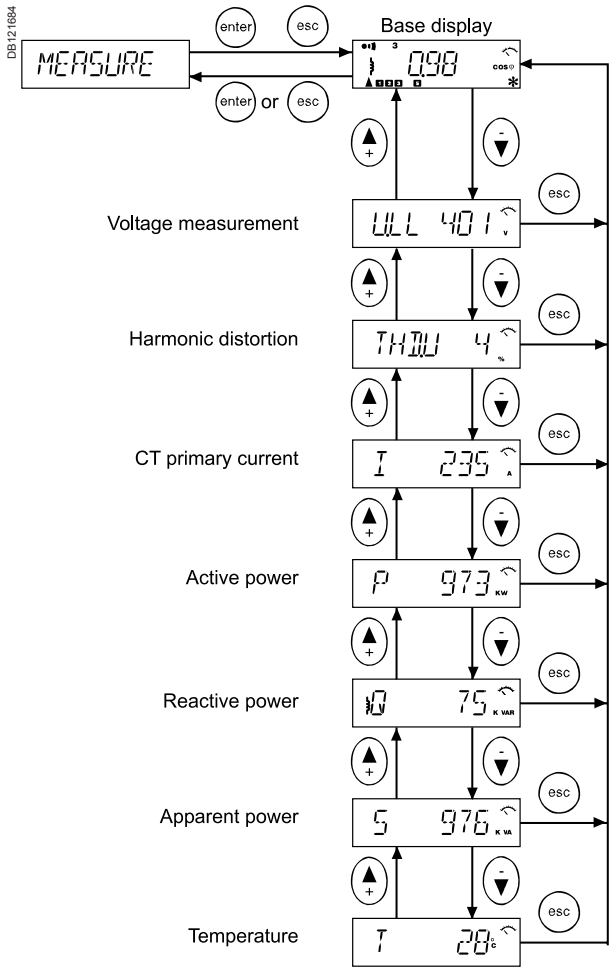


Figure 13: Measurement menu.

5.8 Parameter Update

The most common operating parameters can be accessed from this menu. Unlike the configuration and setup sequences presented earlier in this text, this is a menu allowing a free and unrestricted entry into all of its items and should be used when occasional parameter access is needed. See Glossary (chapter 7), for parameter definitions. In case of error, refer to the *Commissioning Menu*, chapter 5.4..

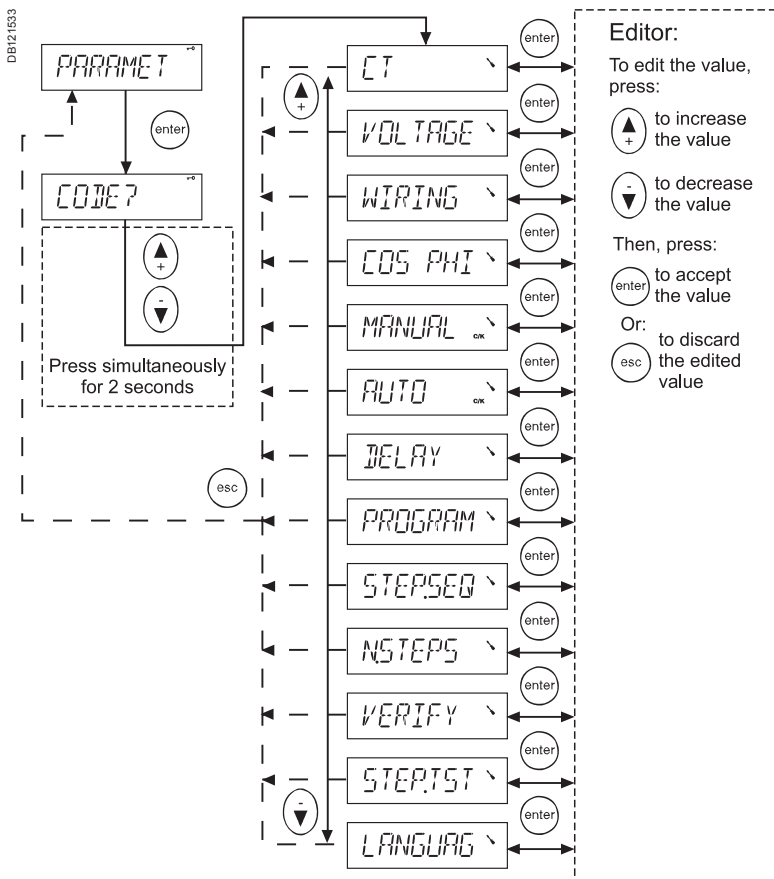


Figure 14: Parameter update.

5.9 Alarms Menu

In Alarms menu, each individual alarm can be enabled or disabled.

Once an alarm condition is detected, the corresponding alarm number is shown at the upper part of the display, and the alarm symbol is on. The alarm relay is also activated.

An alarm can be reset by an extended pressure of  key, this clears all passive alarms. If alarm condition is still active, the alarm cannot be reset.

List of alarms:

| Alarm No. | Alarm | Possible cause | Controller action |
|-----------|--------------------|--|--|
| 1 | Low power factor | <ul style="list-style-type: none"> ● Wiring or LL/LN definition error. ● Undersized bank. | |
| 2 | Hunting | <ul style="list-style-type: none"> ● Too small C/K value. ● Wrong program choice. ● Defective capacitors (optimal program). | Pauses regulation for 10 minutes. |
| 3 | Abnormal Cos Phi | <ul style="list-style-type: none"> ● Wiring mistake. ● overcapacitive network (welded contactors). ● Too low current. | |
| 4 | Low voltage | | Disconnection till voltage returns. |
| 5 | Overcapacitive | <ul style="list-style-type: none"> ● Wiring or LL/LN definition error. ● Improper use of fixed steps. | |
| 6 | Wrong frequency | <ul style="list-style-type: none"> ● Wrong or unstable network frequency detected at startup. | Stop regulation. No automatic restart. |
| 7 | Overcurrent | <ul style="list-style-type: none"> ● Undersized CT. | |
| 8 | Overvoltage | | Temporary disconnection of steps. |
| 9 | Overtemperature | <ul style="list-style-type: none"> ● Ambient temperature too high. ● Defective coolingsystem. | Temporary disconnection of steps. |
| 10 | Voltage distortion | <ul style="list-style-type: none"> ● Harmonic pollution. ● Resonance. | Temporary disconnection of steps. |

Power Factor Controller NR6 / NR12

User manual

Alarm contacts are

- closed when the controller is not energized.
- opened when the controller is energized without alarm.
- closed when the controller is energized with alarm.

ALRM.SET

- informs on the status of each alarm: enabled or disabled.
- allows enabling or disabling of each individual alarm by setting it ON or OFF. If an alarm is set to OFF, it cannot cause an alarm under any condition. To allow a normal alarm response, the appropriate alarm must be enabled, i.e. set ON.

Some alarm triggering levels can be adjusted

- Alarm No 9 (overtemperature), with temperature limit setting.
- Alarm No 10 (voltage distortion), with THD(U) limit setting.

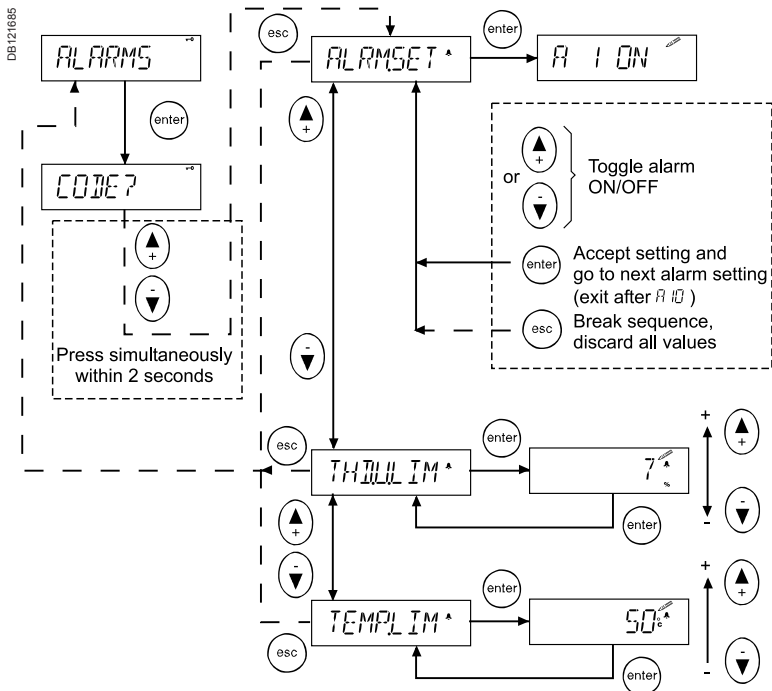


Figure 15: Alarms menu.

5.10 Maintenance menu

The maintenance menu provides useful information about the usage of the bank, capacitors and contactors. Also, some auxiliary settings have been provided.

CAUTION: This menu access is dedicated to specialists.

CAUTION: *In case of installation in a HV bank (with VT), you must adjust the default factory settings. The reconnection delay must be changed to a larger value (e.g. 600 secs) to prevent destruction of capacitors.*

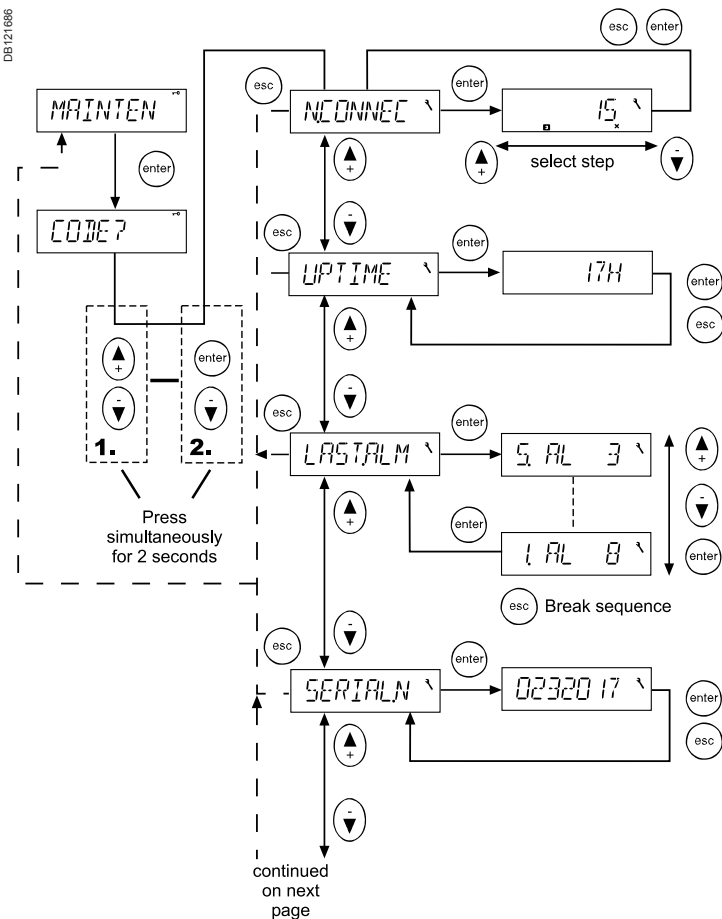


Figure 16/1: Maintenance menu.

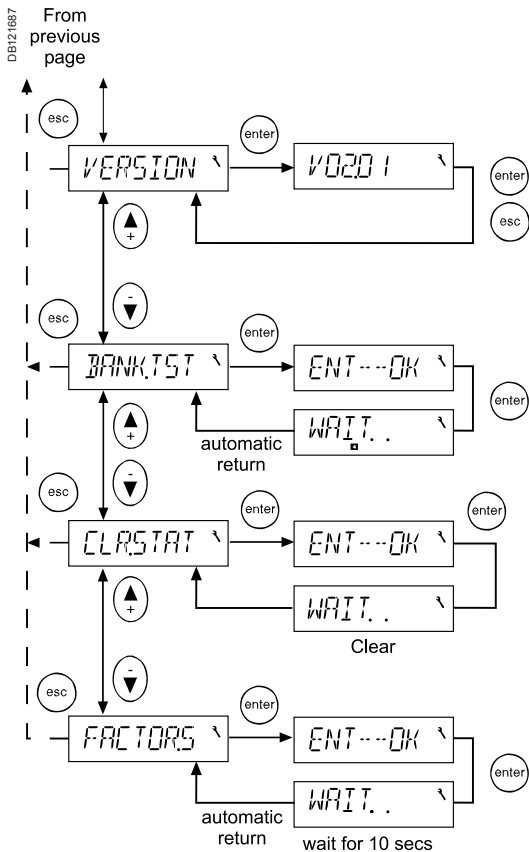


Figure 16/2: Maintenance menu.

6. Miscellaneous

6.1 Stepping programs

The controller's algorithm will try to reach the target $\cos \varphi$ inside a tolerance area dependant upon the C/K value. It reaches the value by switching on or off available relevant steps.

The regulation step program choice is as follows:

a) Stack Program (linear):

All capacitor steps are of equal size (ex: 1.1.1.1). The operation sequence obeys to a last-in-first-out (LIFO) principle. The first step connected will be the last one to be disconnected and vice versa. See Fig. 17

Power Factor Controller NR6 / NR12

User manual

b) Normal program (2+ linear)

Normal program can be used on bank whose step ratio is 1.2.4.4.. The linear sequence starts with the 3rd step. The two first steps are used as fine-tuning. The controller always start by switching the first step then the second. Other steps are used successively. See Fig. 18.

c) Circular A program

All capacitor steps are of equal size (ex: 1.1.1.1). The operation sequence obeys the first-in-first-out (FIFO) principle. The first step connected will be the first one to be disconnected and vice versa. Then a circular sequence is followed. In order to operate correctly, the number of steps programmed into the controller must strictly comply with the number of physical steps. See Fig. 19.

d) Circular B program (1+Circular)

Circular B program can be used on a bank whose step ratio is 1.2.2.2.. The first step is used as tuning after the activating limit is exceeded. The circular sequence starts with the 2nd step.

| Step demand | Step number | | | | | |
|-------------|-------------|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| + | X | | | | | |
| + | X | X | | | | |
| + | X | X | X | | | |
| + | X | X | X | X | | |
| + | X | X | X | X | X | |
| + | X | X | X | X | X | X |
| - | X | X | X | X | X | |
| - | X | X | X | X | | |
| - | X | X | X | | | |
| - | X | X | | | | |
| + | X | X | X | | | |
| + | X | X | X | X | | |
| + | X | X | X | X | X | |
| - | X | X | X | X | | |
| - | X | X | X | | | |
| - | X | X | | | | |
| - | X | X | | | | |
| - | X | | | | | |

Figure 17: Stack program
Operation sequence 1:1:1:1

| Step demand | Step number | | | | | |
|-------------|-------------|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| + | X | | | | | |
| + | X | X | | | | |
| + | X | X | X | | | |
| + | X | X | X | X | | |
| - | | X | X | X | | |
| - | | | X | X | | |
| + | X | | X | X | | |
| + | X | X | X | X | | |
| + | X | X | X | X | X | |
| - | | X | X | X | X | |
| - | | | X | X | X | |
| - | | | X | X | | |
| - | | | X | | | |

Figure 18: Normal program
Operation sequence 1:2:4:4

| Step demand | Step number | | | | | |
|-------------|-------------|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| + | X | | | | | |
| + | X | X | | | | |
| + | X | X | X | | | |
| + | X | X | X | X | | |
| - | | X | X | X | | |
| - | | | X | X | | |
| + | | | X | X | X | |
| + | | | X | X | X | X |
| - | | | | X | X | X |
| - | | | | X | X | |
| + | X | | | X | X | |
| + | X | X | | X | X | |
| - | X | X | | | | X |

Figure 19: Circular A program
Operation sequence 1:1:1

| Step demand | Step number | | | | | |
|-------------|-------------|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| + | X | | | | | |
| + | X | X | | | | |
| + | X | X | X | | | |
| - | | X | X | | | |
| + | X | X | X | | | |
| + | X | X | X | X | | |
| - | | X | X | X | | |
| - | | | X | X | | |
| - | | | | X | | |
| + | X | | | X | | |
| + | X | | | X | X | |
| + | X | | | X | X | X |
| + | X | X | | X | X | X |
| - | | X | | X | X | X |
| - | | X | | | X | X |
| - | | X | | | | X |

Figure 20: Circular B program
Operation sequence 1:2:2

e) Optimal Program:

The optimal program operates with many step configurations:


1.1.1.1.1 1.2.2.2.2 1.2.4.4.4 1.2.4.8.8 1.1.2.2.2
1.1.2.3.3 1.1.2.4.4 1.2.3.3.3 1.2.3.4.4 1.2.3.6.6

The target $\cos \varphi$ power is reached using the fewest number of steps in minimal time. Like the circular program, this algorithm equalises the usage of steps. This program uses optimally selected steps sizes when approaching the target power and at the same time the response delays are shortened, particularly if there is a large requirement for kvar or if the network suddenly becomes capacitive.

Comparison between normal and optimal program:

Normal program will reach the \cos target value by successive connection/disconnection of kvar corresponding to the smallest step value.
Optimal program will reach the target \cos value by successive connection/disconnection of kvar corresponding to the highest relevant and available step value.

Optimal Stepping Program

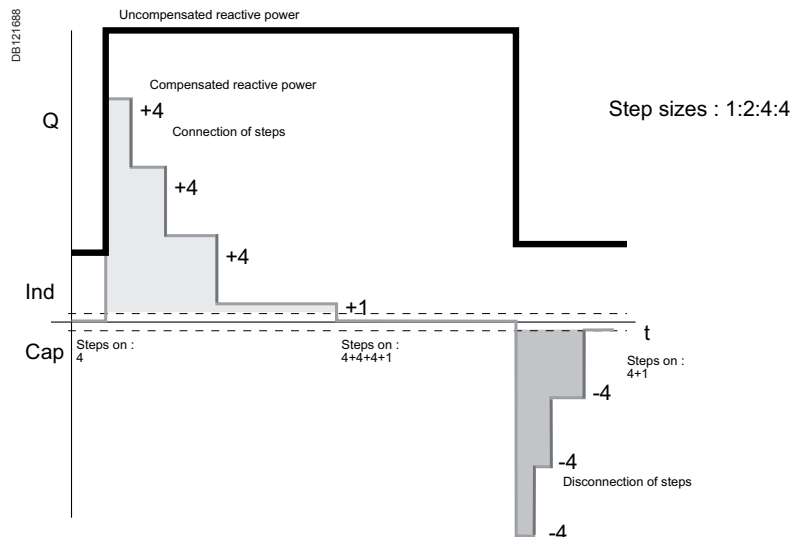

Normal Stepping Program

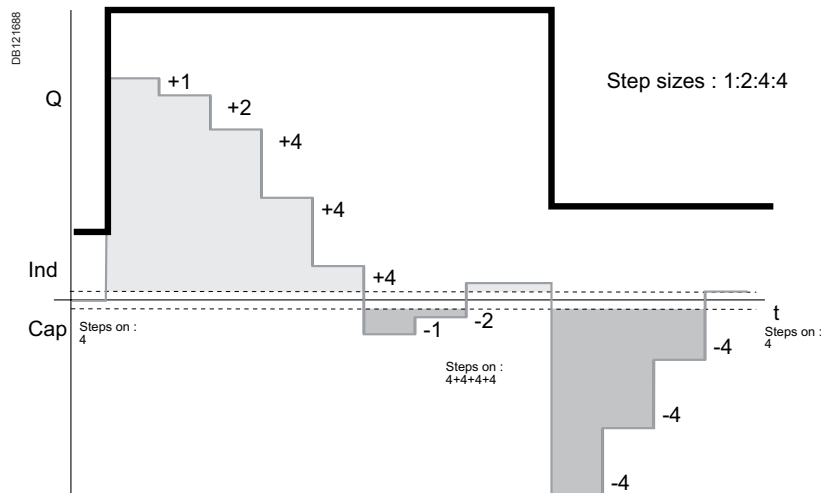


Figure 21: Regulation example - Optimal vs. Normal.

6.2 Manual calculation of response value

Normally the response value, more generally known as the C/K value, is set automatically as a part of the Auto Setup sequence, but there are cases when these values must be entered manually. The correct value can be calculated using an equation requiring the 1st step size (in vars), line-to-line voltage of the network used (in volts) and the CT ratio as follows:

$$C / K = \frac{Q_{1st}}{I_1 / 5A \times U_{LL} \times \sqrt{3}}$$

where

- Q_{1st} = size of 1st step in vars
- U_{LL} = line-to-line voltage in volts
- $I_1/5A$ = CT ratio

Alternatively, the C/K value can be taken from the table below (valid for 400 V networks)

| n1/n2 | Smallest step (kvar) | | | | | | | |
|--------|----------------------|------|------|------|------|------|------|------|
| | 12.5 | 20 | 25 | 30 | 40 | 50 | 60 | 100 |
| 100/5 | 0.91 | 1.44 | | | | | | |
| 150/5 | 0.80 | 0.96 | 1.20 | 1.44 | | | | |
| 200/5 | 0.45 | 0.72 | 0.90 | 1.08 | 1.44 | | | |
| 250/5 | 0.36 | 0.58 | 0.72 | 0.87 | 1.16 | 1.44 | | |
| 300/5 | 0.30 | 0.48 | 0.60 | 0.72 | 0.96 | 1.16 | 1.44 | |
| 400/5 | | 0.36 | 0.45 | 0.54 | 0.72 | 0.90 | 1.08 | |
| 500/5 | | 0.29 | 0.36 | 0.43 | 0.58 | 0.72 | 0.87 | 1.44 |
| 600/5 | | | 0.30 | 0.36 | 0.40 | 0.60 | 0.72 | 1.20 |
| 800/5 | | | | 0.27 | 0.36 | 0.45 | 0.54 | 0.90 |
| 1000/5 | | | | | 0.29 | 0.36 | 0.43 | 0.72 |
| 1500/5 | | | | | | 0.24 | 0.29 | 0.48 |
| 2000/5 | | | | | | | 0.22 | 0.36 |
| 2500/5 | | | | | | | | 0.29 |
| 3000/5 | | | | | | | | 0.24 |

Table 1: C/K-values for 400 V network.

By successive connections (or disconnections) of steps we adjust the reactive power between two symmetrical limits corresponding to response value.

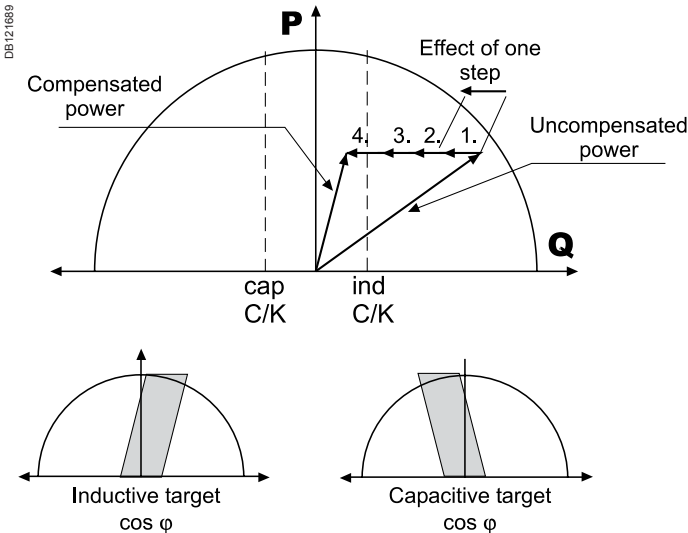


Figure 22: Compensation example and consequences.

6.3 High Voltage use of NR6/NR12

This controller is primarily intended for LV network, but may be used in HV networks under the commissioner's full responsibility, if the following points are taken into account. Connections must employ VT and CT with respect to the following figure.

In HV applications the power values displayed in Measurement Menu represent only the secondary side values of the VT. To avoid potential misunderstandings, set the CT ratio to percentage scale.

Safety (or reconnection) delay must be adapted to the value of the discharge resistors of the capacitors, the most usual value is 10 minutes (600 seconds). The controller's default response delay is adapted for LV use. Using too short a response delay may damage the capacitors.

Important:

- the whole commissioning process must be performed using the Manual setup menu and Parameter menu
- the commissioner should not use Bank Pre-Configuration and Commissioning menus
- the use of Auto Setup menu is strictly forbidden to prevent capacitor destruction.

Power Factor Controller NR6 / NR12

User manual

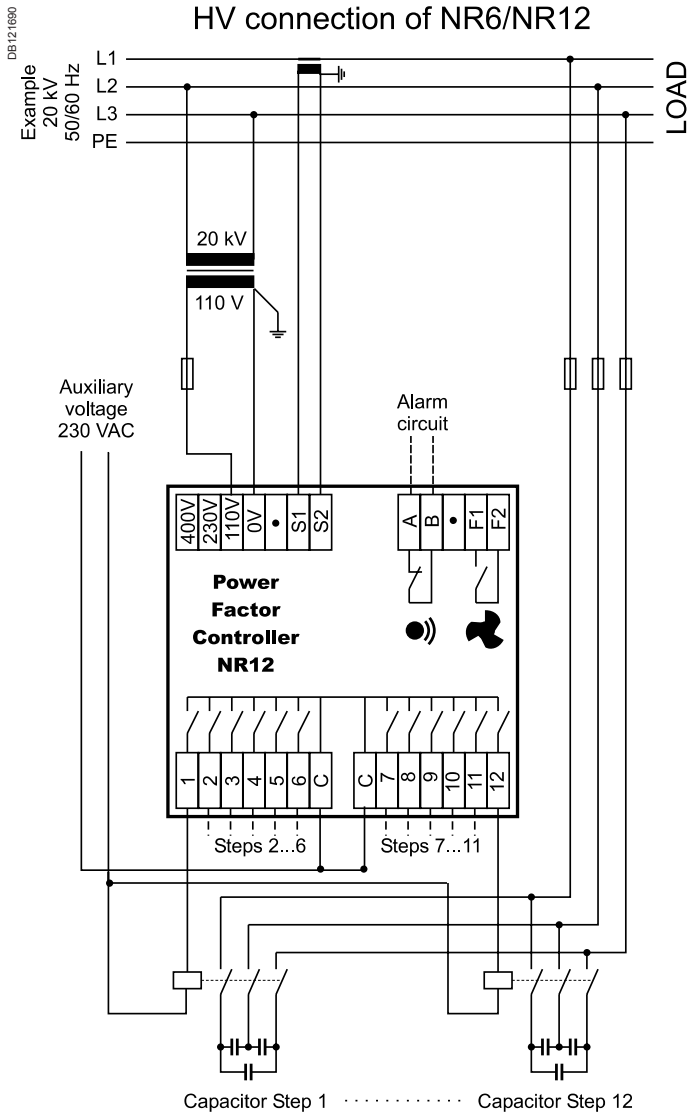


Figure 23: HV use of the controller.

7. Glossary

| Display information | Long form text | Min value | Default value | Max value |
|---------------------|--|-------------|---------------|-------------|
| ALARMS | Alarms Menu. | | | |
| ALRM.SET | Alarm Setup (Enable/Disable). | | | |
| AUTO | Automatic search of C/K response value. | | | |
| AUTO.SET | Automatic Setup Sequence. | | | |
| BANK.PRE | Bank Pre-configuration Sequence Menu. | | | |
| BANK.TST | Bank Test: each step is automatically connected and disconnected in turn. This facilitates testing of the operation of each capacitor step contactor. See also <i>Step Test</i> . | | | |
| CIRC.A | Circular A stepping program. | | | |
| CIRC.B | Circular B stepping program. | | | |
| C/K | Response value, normally set up automatically by the controller. | | | |
| CLR.STAT | Clear Statistics. | | | |
| COMMISS | Commissioning Sequence Menu. | | | |
| COS PHI | Target cos ϕ value. | 0.8ind | 1.00 | 0.9cap |
| CT | Current Transformer primary setting, xxx/5 A. | 25/5 | % | 6000/5 |
| DELAY | Safety Delay or reconnection delay. Response delay is fixed 20% of reconnection delay. The default value corresponds to capacitors with internal discharge resistors 50V 1 min. | 10s | 50s | 600s |
| ENGLISH | Language names: English, for instance. | | | |
| ERR NN | Error in parameter search or verify. NN= error number. | | | |
| FACTOR.S | Restore Factory Settings. | | | |
| IGNORED | The controller does not require the information about step sequence for any program outside <i>Optimal</i> . The controller defines it automatically. | | | |
| I HIGH | Current too high. | | | >115% I_N |
| I LOW | Current too low. | <2.5% I_N | | |
| LANGUAG | Language Selection for menus. | | | |
| LL | Line to Line connection. | | | |
| LN | Line to Neutral connection. | | | |
| LV | Low Voltage. | | | |
| MAINTEN | Maintenance Menu. | | | |
| MAN.SET | Manual Setup Sequence Menu. | | | |

Power Factor Controller NR6 / NR12

User manual

| Display information | Long form text | Min value | Default value | Max value |
|---------------------|---|-----------|---------------|-----------|
| MANUAL | Manual setting of C/K response value. See further. | 0.01 | 0.50 | 1.99 |
| MEASURE | Measurements Menu. | | | |
| N.CONNEC | Number of Connections. | | | |
| N.STEPS | Number of used steps. | 1 | 6/12 | 12 |
| NORMAL | Normal, Standard stepping program. | | | |
| OPTIM | Optimal program. | | | |
| PARAMET | Parameters Menu. | | | |
| PROGRAM | Selection of suitable stepping program between (see 6.1 Stepping programs) The controller's algorithm will try to reach the target $\cos \phi$ inside a tolerance area dependant upon the C/K value. It reaches the value by switching on or off available relevant steps. Stack Normal Circular A Circular B Optimal | | | |
| SEARCH | Search (response value, step sizes, wiring...) | | | |
| SERIAL.N | Serial Number of the product (for internal manufacturer use) | | | |
| STACK | Linear stepping program. | | | |
| STEP.SEQ | Setting of Step Size Sequence 1.1.1.1.1 - 1.1.2.2.2 - 1.1.2.3.3 - 1.1.2.4.4 - 1.2.2.2.2 - 1.2.4.4.4 - 1.2.4.8.8 - 1.2.3.3.3 - 1.2.3.4.4 - 1.2.3.6.6 This concerns the Optimal program. Step sequence are predefined with other programs and modification request are not then taken into account. | | | |
| STEP.TST | Step Test: each step can be manually connected and disconnected. This facilitates testing of the operation of each capacitor step contactor. See also Bank Test. | | | |
| TEMP.LIM | Temperature Limit (adjustable) Fan switch-on limit is 15°C lower than temperature limit. | 20°C | 50°C | 60°C |
| THD.U | Total Harmonic Distortion of Voltage. | | | |

Power Factor Controller NR6 / NR12

User manual

| Display information | Long form text | Min value | Default value | Max value |
|---------------------|---|-----------|---------------|-----------|
| THD.U.LIM | Maximum Harmonic Distortion of Voltage (adjustable). | 5% | 7% | 20% |
| U LOW | Voltage too low. | <85%UN | | |
| UPTIME | Uptime (Power On Hours). | | | |
| VERIFY | Automatic verification of parameters. | | | |
| VERSION | Software version number (for internal manufacturer use). | | | |
| VOLTAGE | Input Voltage reference value for voltage alarms. | 80V | 400V | 460V |
| WIRING | Connections of voltage and current inputs. Example: U.L2-L3 (Voltage connected between phase 2 and 3) Example: I.1.AUTO (Current connected to phase 1 with automatic polarity selection) Current polarity selections: DIR = direct connection INV = inverted connection AUTO = automatic polarity (defined by controller) | | | |

8. Technical specifications

| | |
|----------------------------------|---|
| Number of steps | 6 or 12 |
| Dimensions | 155 x 158 x 70 mm |
| Frequency | 48...52 Hz, 58...62 Hz |
| Measuring current | 0...5 A |
| Measuring and supply voltages | 88...130 V 185...265 V 320...460 V |
| Relay outputs | 120 Vac/5A, 250 Vac/2A, 400 Vac/1A 110 Vdc/0.3A, 60 Vdc/0.6A, 24 Vdc/2A |
| Display | LCD glass with 160 symbols, backlighted |
| Protection class | IP41 front panel, IP20 rear part |
| Target cos ϕ -range | 0.85 ind ... 1.00 ... 0.90 cap |
| Response limits, C/K | 0.01 ... 1.99 symmetrical |
| Reconnection delay | 10...600 s |
| Response delay | 20 % of reconnection delay, min. 10 s |
| Displayed measurements | cos ϕ , P, Q, S, THD(U), temperature |
| Installation method | Panel installation, DIN-rail installation |
| Casing | Impact resistant PC/ABS, UL94V-0 |
| Operating temperature range | 0...60°C |
| Alarm log | List of 5 last alarms |
| Step counters | Yes |
| Fan control with dedicated relay | Yes |
| Accuracy (of FS) | Is: 5% Iq: 5% U/I-samples: 5% Phase: 5° Distortion: ± 3 dB (up to 11th) Temperature: $\pm 3^\circ\text{C}$ |
| CT setting range | 25/5 ... 6000/5 |
| Power outage detection | Reaction time > 15 ms |
| Approvals | CEI 61010-1 CEI 61000-6-2 CEI 61000-6-4 CEI 61326 |

Schneider Electric Industries SAS

Rectiphase
399 rue de la Gare
74370 Pringy
France
Tel.: 33 (0)4 50 66 95 00
Fax: 33 (0)4 50 27 24 19
<http://www.schneider-electric.com>
<http://www.merlin-gerin.com>

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.



Printed on ecological paper.

Layout: Schneider Electric - Sedoc
Photos: Schneider Electric
Printing: